

## CASE STUDY

# USING WIREBMR™ TO INFER TAILING SATURATION

LABRATORY STUDY, UNIVERSITY OF WESTERN AUSTRALIA

## THE SITUATION

Tailing Storage Facilities (TSF) are reservoirs that store mine tailings which are fine-grained waste material in suspension that is discharged from an ore processing plant or coal preparation plant. The safety of TSF is an increasing concern owing to their potential danger to the environment and the lives of those living downstream, as evidenced by a series of recent failures. A common cause of TSF failure is liquefaction, which can occur in loose tailings that are near-saturated, with 80% degree of saturation often being taken as the required value for liquefaction to be possible.

Quantifying saturation ( $S_r$ ) in tailings can be made with three variables: bulk Gravimetric Water Content (GWC), bulk Volumetric Water Content (VWC) and the specific gravity (GS) of the solids component of the tailings.

Measurement of GWC and GS can be performed on disturbed samples taken from the TSF. These measurements are commonly performed, with the process and application well understood. However, due to the loose condition of many tailings, disturbance on sampling makes in-situ VWC challenging. Consequently, one of the primary challenges for determining saturation is obtaining a useful measure for VWC.

## THE SOLUTION

Orica Digital Solutions' WIREBmr™ tool is a downhole geophysics tool that measures water contained in subsurface environments safely and accurately. WIREBmr™ is specifically tuned to sense fluids within the pore network, enabling precise determination of the formation's total water content, i.e. VWC.

A hole drilled through the TSF, either specifically for purpose or as part of larger studies, can therefore be used to calculate the degree of saturation of tailings through:

- Laboratory measurements on bulk samples to calculate GWC and GS on samples acquired during drilling.
- WIREBmr™ run post drilling and casing with PVC, to obtain a continuous downhole log of VWC.

## THE RESULT

A collaborative program was conducted in partnership with the University of Western Australia to assess the efficacy of WIREBmr™ in characterising VWC within tailings. This involved conducting laboratory analysis to estimate Groundwater Content and VWC at varying levels of water saturation. Subsequently, identical samples were transferred in a purpose-built vessel enabling the utilisation of the WIREBmr™ system to estimate volumetric water content.

“

*The determination of volumetric water content with Orica Digital Solutions' WIREBmr in tailings is a very promising technology to better characterise tailings.*”

**DR DAVID REID,  
RESEARCH FELLOW, UNIVERSITY  
OF WESTERN AUSTRALIA.**



Image 1: lab test setup including the test vessel during filling (left) and during WIREBmr™ insertion (right).

The findings in figure 1 illustrates the successful characterisation of saturation by employing WIREBmr™ during this laboratory-scale demonstration. Accordingly, it is possible to greatly increase the understanding of the saturation state, as a large component of liquefaction risk, of a tailings storage facility through the application of WIREBmr™ supported by laboratory analysis.

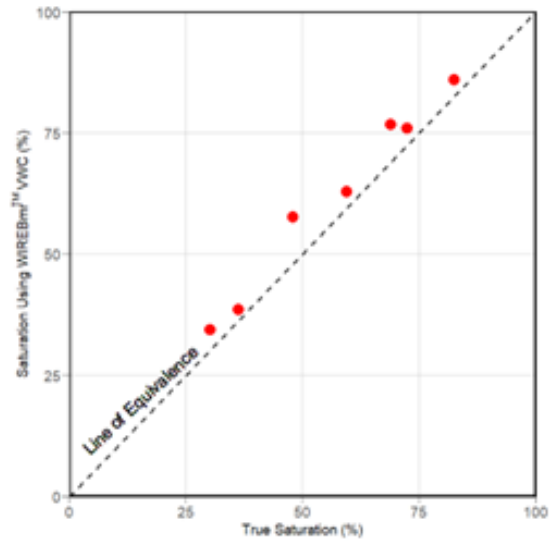


Figure 1: finding from employing WIREBmr™ during the laboratory-scale demonstration

## ACKNOWLEDGEMENTS

Orica Digital Solutions wishes to thank the University of Western Australia for their support and permission to publish this case study.

**Author:** Nick Jervis- Bardy

**Date:** 1 September 2023

## WIREBMR™ DELIVERS OPERATIONAL VALUE AND EFFICIENCIES



Reduce operating costs



Improve productivity



Increase safety



Improve recovery

For more information on how WIREBmr™ can support your operations, contact your local Orica representative or visit [orica.com/wirebmr](https://orica.com/wirebmr)



©2024 Orica Group. All rights reserved. All information contained in this document is provided for informational purposes only and is subject to change without notice. Since the Orica Group cannot anticipate or control the conditions under which this information and its products may be used, each user should review the information in the specific context of the intended application. To the maximum extent permitted by law, the Orica Group specifically disclaims all warranties express or implied in law, including accuracy, non-infringement, and implied warranties of merchantability or fitness for a particular purpose. The Orica Group specifically disclaims, and will not be responsible for, any liability or damages resulting from the use or reliance upon the information in this document.

The word Orica and the Ring device are trademarks of the Orica Group.